


Entone Remote Guide

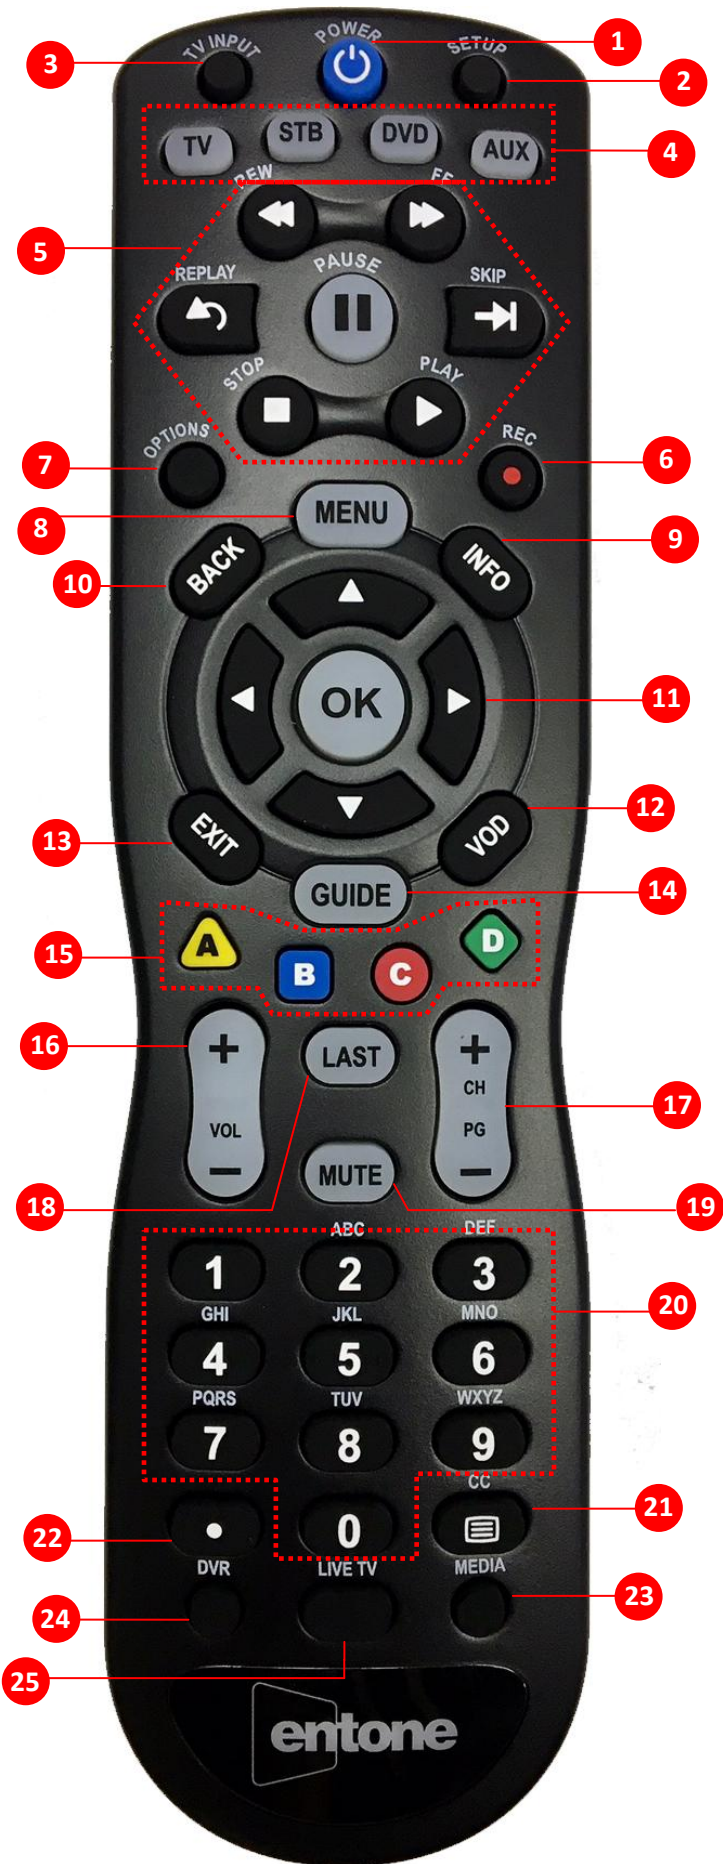

- | | | |
|-----|----------------|--|
| 1. | POWER | Switches the power on/off for the currently selected device
Switches STB to power on or standby mode |
| 2. | SET UP | Set up remote for TV |
| 3. | TV/INPUT | Changes the current A/V input of the selected device programmed (i.e. TV or AUX) |
| 4. | DEVICE CONTROL | TV: Select to control TV (if programmed)
STB: This button is pre-programmed to control the Entone device
DVD: Select to control DVD (if programmed)
AUX: Select to control another device (if programmed) |
| 5. | TRANSPORT KEYS | Controls video program for LIVE TV / DVR / VOD
REPLAY: Goes back approx. 30 seconds
REW: Rewinds video
FF: Fast forwards video
SKIP: Advances ahead in 30 second increments
PAUSE: Pauses Video
PLAY: Plays video or resumes a paused program
STOP: Stops playback of video |
| 6. | REC | Starts or stops recording a program |
| 7. | OPTIONS | Provides additional options for certain on-screen menu or highlighted item |
| 8. | MENU | Displays on-screen menu or home screen |
| 9. | INFO | Displays on-screen information about the current TV / VOD / DVR program |
| 10. | BACK | Goes back one level within menus |
| 11. | NAVIGATION | ARROW KEYS: Navigates within the on-screen guide/menus
OK: Executes the currently selected menu option
LEFT/RIGHT: Rewinds/Fast forwards video |
| 12. | VOD | Button not active |
| 13. | EXIT | Exits the current menu item or back to LIVE TV |
| 14. | GUIDE | Displays the on-screen program guide |
| 15. | SHORTCUT | YELLOW (A): Displays on-screen program guide
BLUE (B): Goes back one level within menus
RED (C): Displays on-screen information about the current program
GREEN (D): Toggles closed captioning on/off |
| 16. | VOL +/- | Increases or decreases TV volume |
| 17. | CH/PG | Changes channel up/down or pages up/down within the on-screen program guide |
| 18. | LAST | Changes channel to the previously viewed channel |
| 19. | MUTE | Turns TV volume on/off |
| 20. | NUMBER KEYS | Allows direct access to specific channels and menu items |
| 21. | CC | Toggles closed captioning on/off |
| 22. | DOT | Used when entering a period in certain channels
Displays on-screen keyboard for certain applications |
| 23. | MEDIA | Button not active |
| 24. | DVR | Displays list of recorded programs |
| 25. | LIVE TV | Button not active |