

# Remote Control Guide



1. POWER Switches the power on/off for the currently selected device  
Switches STB to power on or standby mode
2. SET UP Set up remote for TV
3. TV/INPUT Changes the current A/V input of the selected device programmed (i.e. TV or AUX)
4. DEVICE CONTROL  
TV: Select to control TV (if programmed)  
STB: This button is pre-programmed to control the device  
DVD: Select to control DVD (if programmed)  
AUX: Select to control another device (if programmed)
5. TRANSPORT KEYS  
REPLAY: Goes back approx. 30 seconds  
REW: Rewinds video  
FF: Fast forwards video  
SKIP: Advances ahead in 30 second increments  
PAUSE: Pauses Video  
PLAY: Plays video or resumes a paused program  
STOP: Stops playback of video
6. REC Starts or stops recording a program
7. OPTIONS Provides additional options for certain on-screen menu or highlighted item
8. MENU Displays on-screen menu or home screen
9. INFO Displays on-screen information about the current TV / VOD / DVR program
10. BACK Goes back one level within menus
11. NAVIGATION  
ARROW KEYS: Navigates within the on-screen guide/menus  
OK: Executes the currently selected menu option  
LEFT/RIGHT: Rewinds/Fast forwards video
12. VOD Button not active
13. EXIT Exits the current menu item or back to LIVE TV
14. GUIDE Displays the on-screen program guide
15. SHORTCUT  
YELLOW (A): Displays on-screen program guide  
BLUE (B): Goes back one level within menus  
RED (C): Displays on-screen information about the current program  
GREEN (D): Toggles closed captioning on/off
16. VOL +/- Increases or decreases TV volume
17. CH/PG Changes channel up/down or pages up/down within the on-screen program guide
18. LAST Changes channel to the previously viewed channel
19. MUTE Turns TV volume on/off
20. NUMBER KEYS Allows direct access to specific channels and menu items
21. CC Toggles closed captioning on/off
22. DOT Used when entering a period in certain channels  
Displays on-screen keyboard for certain applications
23. MEDIA Button not active
24. DVR Displays list of recorded programs
25. LIVE TV Button not active

# Remote Control Guide



## Instructions for programming the remote to the TV

1. Press and hold SETUP until LED light blinks twice.
2. Press a mode key.
3. Press and hold OK key.
4. Release key when device turns off.